



# NAPLANA Care Emulsion

2085 NAPLANA 500 ml - 1 l - 5 l - 20 l

2086 NAPLANA Plus 500 ml - 1 l - 5 l



**Basic and maintenance care for floors and furniture.  
For surfaces made of wood, cork, linoleum, stone and smooth leather.**

- Crystal Clear Ingredient Declaration ([www.biofa.de](http://www.biofa.de))
- Low-emission
- Made from natural raw materials
- 98% renewable and mineral ingredients
- Solvent-free and breathable
- Colorless
- Dirt and water repellent
- Protects against mechanical abrasion
- Concentrate
- 2086: anti-slip
- 2085 has been tested for harmful substances and is recommended by the Sentinel Holding Institute.



«Tested healthier products»



Indoor air emissions

## Properties:

Consists of natural raw materials such as carnauba wax and is used as primary and routine maintenance on varnished, waxed and oiled floors, furniture finishes, etc.. It protects against dirt and mechanical wear. NAPLANA 2085 is also suited for smooth leather and other finishes. Following a short drying time, results in a satin sheen finish without polishing. The treated surfaces are rejuvenated, are diffusion-capable, and dirt-repellent.


NAPLANA Care Emulsion Plus additionally gives the finish anti-slip effect.

Use sparingly on smooth stone surfaces. Regular maintenance will dramatically extend the service life of the floor. After drying, NAPLANA 2085 can be polished out further by machine.

**Attention:** When using over extended periods, observe the correct dosage. An unpleasant, difficult to remove wax layer may form otherwise.

## Ingredients:

Water, carnauba wax, emulgator, lavandine oil (contains linalool), bergamot oil (contains limonene). NAPLANA plus anti-slip additionally contains micro-wax.

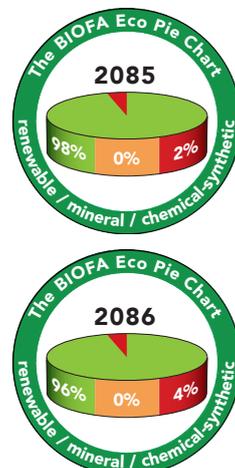



## Application:

Newly treated floors should first be cleaned with NACASA Universal Cleaner 4010 no sooner than after 4 weeks. Then apply a thin and even coat of NAPLANA (1 cap from the 1 liter bottle or 20 ml on 1 l of lukewarm water) with a lint-free rag or floor scrubber. The subsequent maintenance intervals are based on the traffic load of the floors. Concentrated to pure NAPLANA 2085 can also be used on smooth leather and other finishes.

## Attention:

**Polished finishes tend to be slippery! Test before use and arrange for test surfaces as needed! Start by thoroughly cleaning substrates with NAPLANA prior to each application. Do not overdose NAPLANA as this may result in streaks and a slipping hazard!**

## Recommended Equipment:



1. **009827** Holder and mop Classic XL with telescopic handle

## Equipment cleaning:

Immediately clean with water and soap as needed.

## Storage:

Keep cool, protect against frost, and store properly sealed.

## Container:

0,5 l and 1 l PE/PP plastic bottle  
5 l and 20 l PE/PP plastic canisters

## Disposal:

Use up product completely whenever possible. Dispose liquid product leftovers and partially full and cleaned containers in compliance with local statutory regulations. Only recycle fully emptied and cleaned containers.

**German Waste Classification Directive** [Ab-fallverzeichnis Verordnung - AVV] **waste code iaw. European waste classification:** 20 01 30

## Safety instructions:

**Keep out of the reach of children. In case of contact with the eyes, rinse thoroughly with water, in case of contact with the skin with water and soap. Ensure good ventilation during processing and drying. Do not allow it to get into soil, water or sewerage.**

Safety data sheet available on request.

---

**2085, 2086 contain max. 1 g/l VOC.**

---

GISCODE: GE 10

## Sentinel Holding Institut:

**Information portal for products tested for harmful substances**

This QR code will take you to the SHI database  
BIOFA NAPLANA Care Emulsion 2085:

